



AC/DC adapter enclosed with the BCS.iTA/2TR Box: 220V/500mA

For further information, see the BCS.iTA/2TR manual.

All programming of the TELES.iTA/2TR box is done with an analogue telephone/fax connected to the one to be programmed (except PIN code which can be programmed from any port).

**PIN code:**

To allow programming, the default 5-digit PIN code 00000 must first be changed using the "90" command. To enter e.g. 01234, dial:

\* 9 0 \* 0 0 0 0 0 0 \* 0 1 2 3 4 #

command Default PIN code New PIN code

**Assigning an MSN number to a port:**

Enter MSN for appropriate service (e.g. MSN 40 = 9.6kbps fax, MSN 21 = 4.8speech). Use command 01 to program an MSN number (example):

\* 0 1 \* 0 1 2 3 4 \* 4 0 # ACK TONE

command PIN code MSN number

The port now only responds to calls directed to MSN number 40 (see Device Manager in vtLite Marine to select correct MSN).

**Configuring a port:**

The service type must be assigned to a port:

- Group 3 telefax: type 4
- Analogue telephone or modem: type 2

E.g. to program the port for connection of fax, dial:

\* 0 4 \* 0 1 2 3 4 \* 4 #

command PIN code service type 4 (example) (ex.:group 3 fax)