

WorldPhone - Oscillator Compensation

General

Restoring communication with the satellite when receiving the alarm: **Not available**
 The function only appears when **"Set diagnostics"** is **On**.

Set diagnostics

1 Press the **Menu** function key and scroll down to **Advanced functions**:

Press **Selct** or **right arrow** and continue down to **Configuration**:

2 **Selct** or **right arrow** opens the **Configuration menu**:

3 Scroll down to **Set diagnostics**:
 and

press **Selct** or **right arrow** to open **Set diagnostics** window:

4 Press **On** to turn on the diagnostics function.

Oscillator compensation

5 Repeat step 1 and scroll down to **Information available**.

Scroll down and press **Selct** or **right arrow** to open **Oscillator compensation** window:

Press **Scan** with the antenna pointed towards the satellite.
(Pointing is automatic on Marine and Voyager antennas. Will take 10-15 minutes.)

6 If several choices, scroll down to preferred frequency.

Press **Selct**:

7 When **Verification succeeded** is displayed, press **Save** to *update* the WorldPhone oscillator.

