

Saturn B/M – Main Control Unit Fan


The Main Control Unit (MCU) cooling fan has in some cases stopped, giving the following symptoms:

- Message appears in the display: "**Temperature too high**".
- The internal temperature sensor has turned off the MCU automatically.

The fan rotor must be cleaned and lubricated:

1. Place the MCU with the bottom side facing up.
2. Unscrew the bottom cover.
3. Using a small brush, remove dust and dirt from the fan rotor.
4. Pull off the rubber end piece w/bearing.
5. Clean the shaft end and lubricate sparsely with dry silicone grease.
6. Reinsert the end piece.
7. Remount the bottom cover.

MCU bottom cover

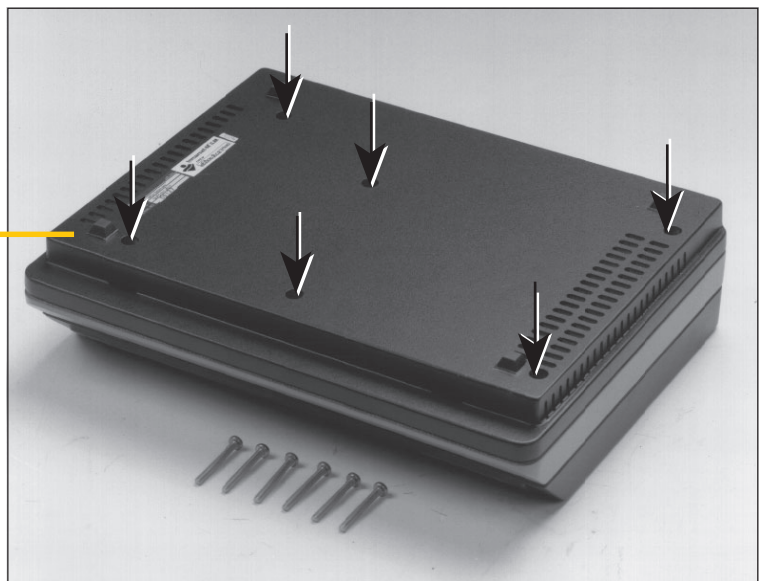

Cooling fan

Rubber end piece

